

The Over & Under Shotgun



BROWNING®

12 and 20 bore

REMOVING THE BARRELS

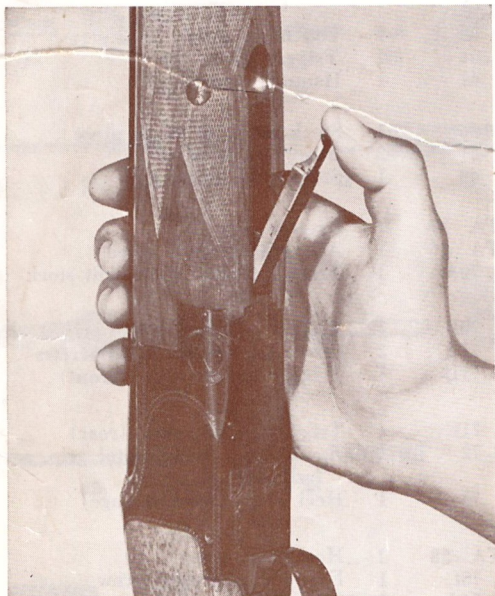


Fig. 1

- 1° Press the fore-end lever towards the action and allow this part to hang down (fig. 1).

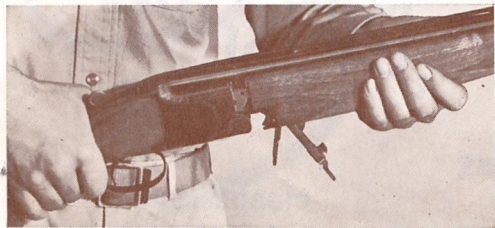


Fig. 2

- 2° Slide the complete fore-end towards the muzzle so as to disengage the fore-end lock. This will then also hang down (fig. 2).



Fig. 3

- 3° Push the top lever right over, open the gun as normally and lift the barrels clear of the action (fig. 3).

REPLACING THE BARRELS

- 1° Place the barrels in the action (fig. 4) taking care that the hinge pin (B) correctly fits into the barrel hook (A).

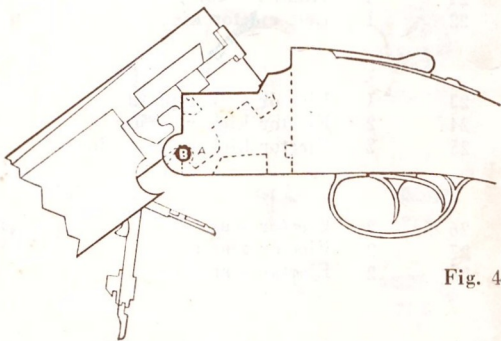


Fig. 4

- 2° Hold the top lever right open and close the gun normally, keeping the barrels pressed against the hinge pin during this manœuvre.
- 3° Raise the fore-end lock and slide the complete fore-end back so as to engage this part and then press into position the fore-end lever.

LIST OF PARTS


Common to both single trigger and double trigger gun

No.	Nr of parts	Designation of parts
5	1	Foresight
6ad	1	Right fore-end cleat
6ag	1	Left fore-end cleat
7	2	Screw for ditto
8a	2	Right or left ejector
10a	1	Right ejector slide
11a	1	Left ejector slide
STA 136	2	Roll pin
13	1	Cocking lever operator
14	1	Cocking lever operator pin
15	1	Fore-end iron
16	1	Fore-end lever
17	1	Fore-end lever pivot
18	1	Fore-end lock
19	1	Fore-end lock spring
20	1	Fore-end lock stop pin
21	1	Right ejector kicker
22	1	Left ejector kicker
23	1	Ejector kicker pivot
24	2	Ejector kicker spring
25	2	Ejector kicker spring head
26	2	Ejector sear
27	2	Ejector sear spring
28	2	Ejector sear pivot
29b	1	Fore-end wood (see last page)
33	1	Barrel hinge pin
34	1	Left ejector operating rod
35	1	Right ejector operating rod
36	1	Cocking lever
37	1	Cocking lever pivot
38	1	Right hammer
39	1	Left hammer


40	1	Hammer pivot
41	2	Hammer spring
42	2	Hammer spring head
43	1	Upper firing pin
44	1	Lower firing pin
45	1	Lower firing pin spring
46	2	Guide spring pin
47	1	Barrel lock
48	1	Top lever
49	1	Top lever spring
50	1	Top lever spring head
51	1	Top lever foot
53	1	Top lever spring head screw
56	1	Trigger pivot
61	1	Hammer sear pivot
66	1	Stock assembly cross piece
67	2	Screw for ditto
68	1	Stock assembling bolt
STA 37	1	Grover ring
STA 46	1	Assembly screw washer
70A	1	Trigger guard for straight stock
70P	1	Trigger guard for pistol grip stock
71A	2	Insert for trigger guard screws
71B	1	Trigger guard screw (front)
71C	1	Trigger guard screw (rear)
72	1	Stock (straight or pistol grip, see last page)
73	1	Heel plate (see last page)
STA 28	2	Heel plate screw
75t	1	Fore-end assembly screw
76d	1	Right cup for ditto
76g	1	Left cup for ditto
78	1	Top lever foot screw

*Légia
Spray*



**cleans
lubricates
protects
your firearms**

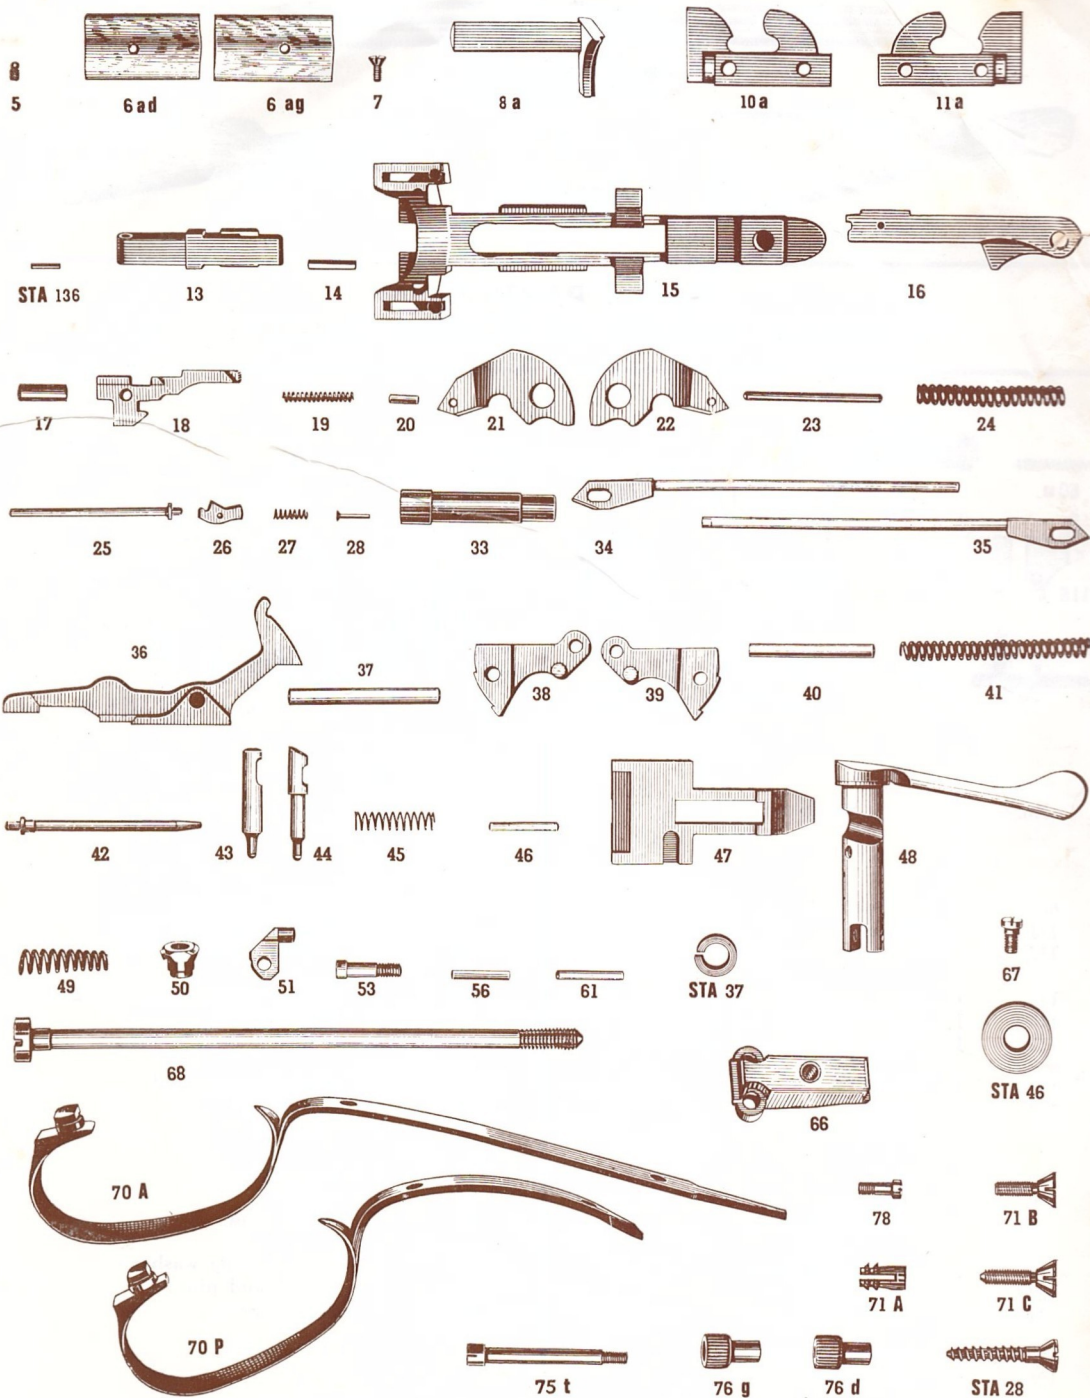

FABRIQUE NATIONALE HERSTAL S. A.
B-4400 - HERSTAL-BELGIUM

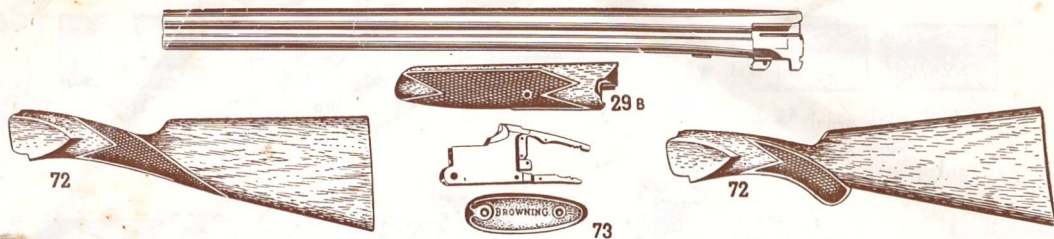

PARTS PARTICULAR TO SINGLE TRIGGER OR DOUBLE TRIGGER GUN

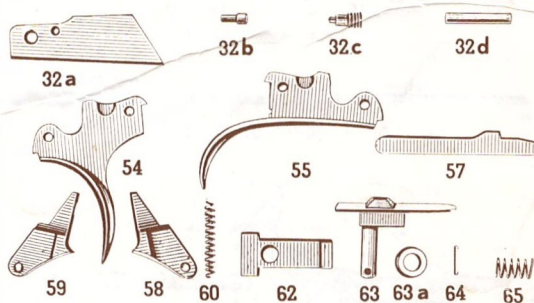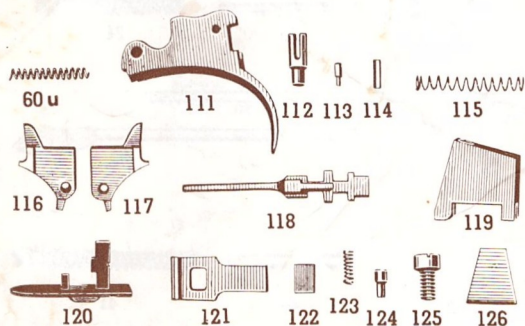

No.	Nr of parts	Single trigger
60u	2	Sear spring
111	1	Trigger
112	1	Sear operating rod base
113	1	Sear operating rod pivot
114	1	Sear operating rod pin
115	1	Sear operating rod spring
116	1	Right sear
117	1	Left sear
118	1	Sear operating rod
119	1	Block
120	1	Safety stud
121	1	Safety stud spring
122	1	Safety stud block
123	1	Block spring
124	1	Block spring head
125	1	Top tang screw
126	1	Trigger spring

No.	Nr of parts	Double trigger
32a	1	Trigger separator
32b	1	Trigger separator bead
32c	1	Trigger separator bead screw
32d	1	Trigger separator bead pin
54	1	Right trigger
55	1	Left trigger
57	1	Sear operating rod
58	1	Right sear
59	1	Left sear
60	2	Sear spring
62	1	Safety
63	1	Safety stud
63a	1	Safety spring washer
64	1	Safety stud pin
65	1	Safety spring

NOTE. — Clients are requested to please mention in their orders for spare parts the bore and the model of the gun, the type of stock (straight or pistol grip) and the type of trigger. It is also advisable to mention the number of the gun.